












## DE VILLE

PRESTIGE CO-AXIAL POWER RESERVE 39.5 MM

Steel - yellow gold on leather strap

Caliber  
**2627**

**424.23.40.21.58.001**

-  Co-Axial escapement
-  Automatic
-  Chronometer
-  Power reserve
-  Sapphire crystal
-  Anti-reflective treatment
-  Gold 750‰ (18K)
-  Watch with diamond(s)
-  Water-Resistant to a relative pressure of 3 bar (30 metres/100 feet)



### WATCH FUNCTIONS

The crown has 3 positions:


**1. Normal position (wearing position):** when the crown is positioned against the case, the crown ensures that the watch is water-resistant.

**Occasional winding:** if the watch has not been worn for 48 hours or more, wind it up with the crown in position 1.

**2. Correcting the date:** pull the crown out to position 2, turn the crown backwards, then push the crown back to position 1.

*NB: date-setting is not recommended between 8 pm and 2 am.*

**3. Time setting:** hours – minutes – seconds. Pull the crown out to position 3. The seconds hand will stop. Turn the crown forwards or backwards. Synchronise the seconds by pushing the crown back to position 1 to coincide with a given time signal.

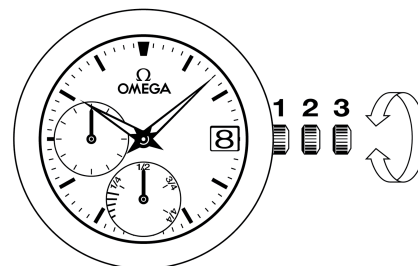

## POWER RESERVE

- Counter at 9 o'clock: small seconds.
- Counter at 6 o'clock: power reserve indicator.

When the watch is fully wound, the power reserve indicator hand points to  $4/4$ . This means that the power reserve is at least 44 hours.

If the watch is not being worn, or during periods of low activity, the power reserve indicator hand progressively moves anti-clockwise.

If the power reserve indicator hand is pointing to below  $1/4$ , this means that the watch's power reserve is less than 10 hours. In this case, the watch should be worn or wound by hand to prevent it from stopping.

During manual winding (crown in position 1) or when worn (selfwinding), the power reserve indicator hand moves clockwise.

